



Anton Paar

SmartRef

Quick Guide

CONTENTS

1 REQUIRED EQUIPMENT

2 INSTALLATION

3 ZERO ADJUSTMENT

4 MEASUREMENT

5 CLEANING

6 TIPS

1 REQUIRED EQUIPMENT



SmartRef



Smartphone



Sample



Pipette

2 INSTALLATION

1



2



3



2 INSTALLATION

4



5



3 ZERO ADJUSTMENT

1



2



3 ZERO ADJUSTMENT

3



4



4 MEASUREMENT

1




2




4 MEASUREMENT

3

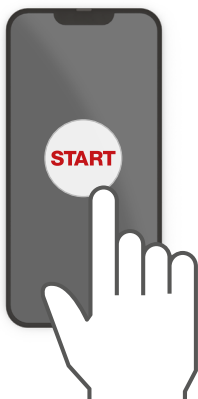

4

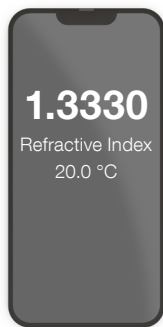

DOWNLOAD MANUAL



www.my-smartref.com

5 CLEANING

1




2



6 TIPS

1

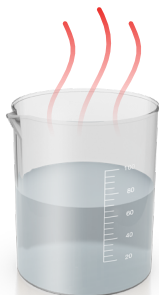

2

Filter out
solids



3



